



How to Upgrade Wireless NVR and IP Camera Firmware



1, Connect NVR to router by Ethernet cable, manage NVR system on monitor.

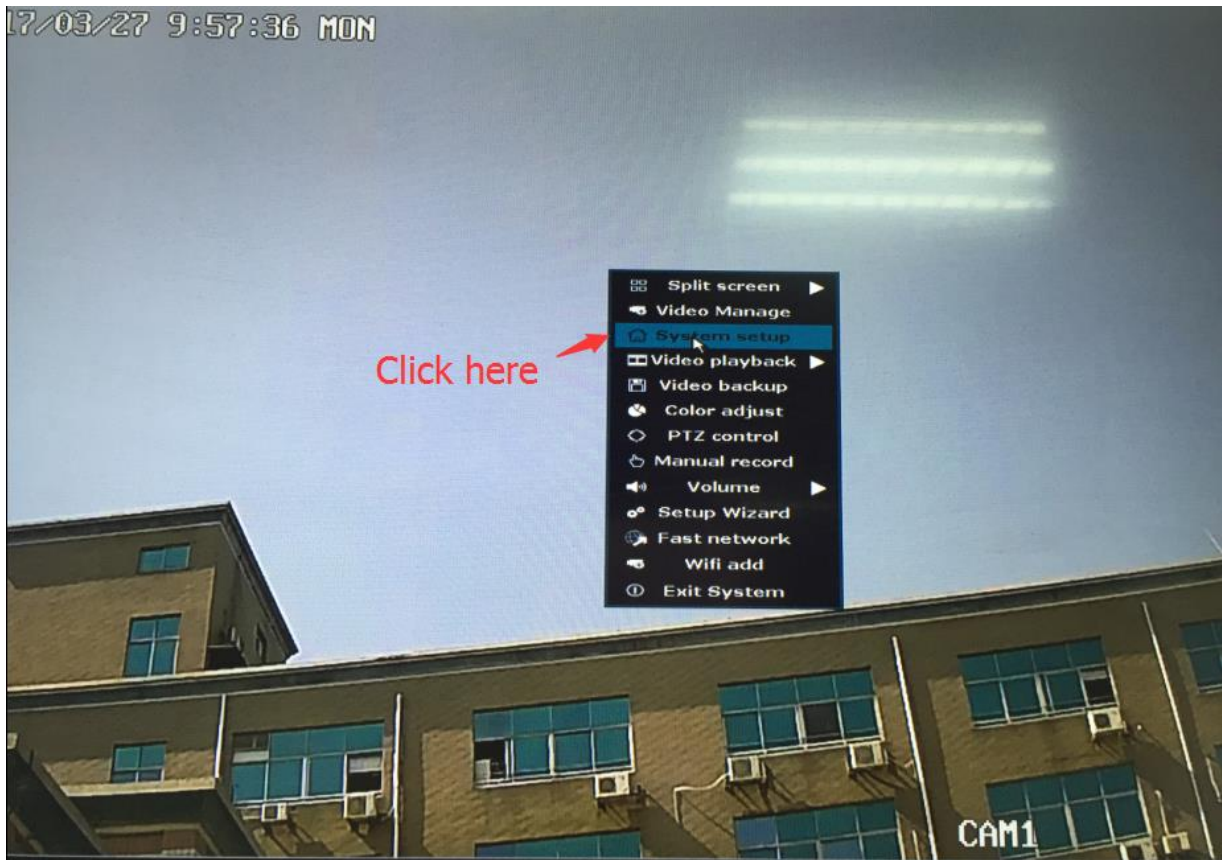

2, Make sure NVR system Network Status shows "Healthy Network",

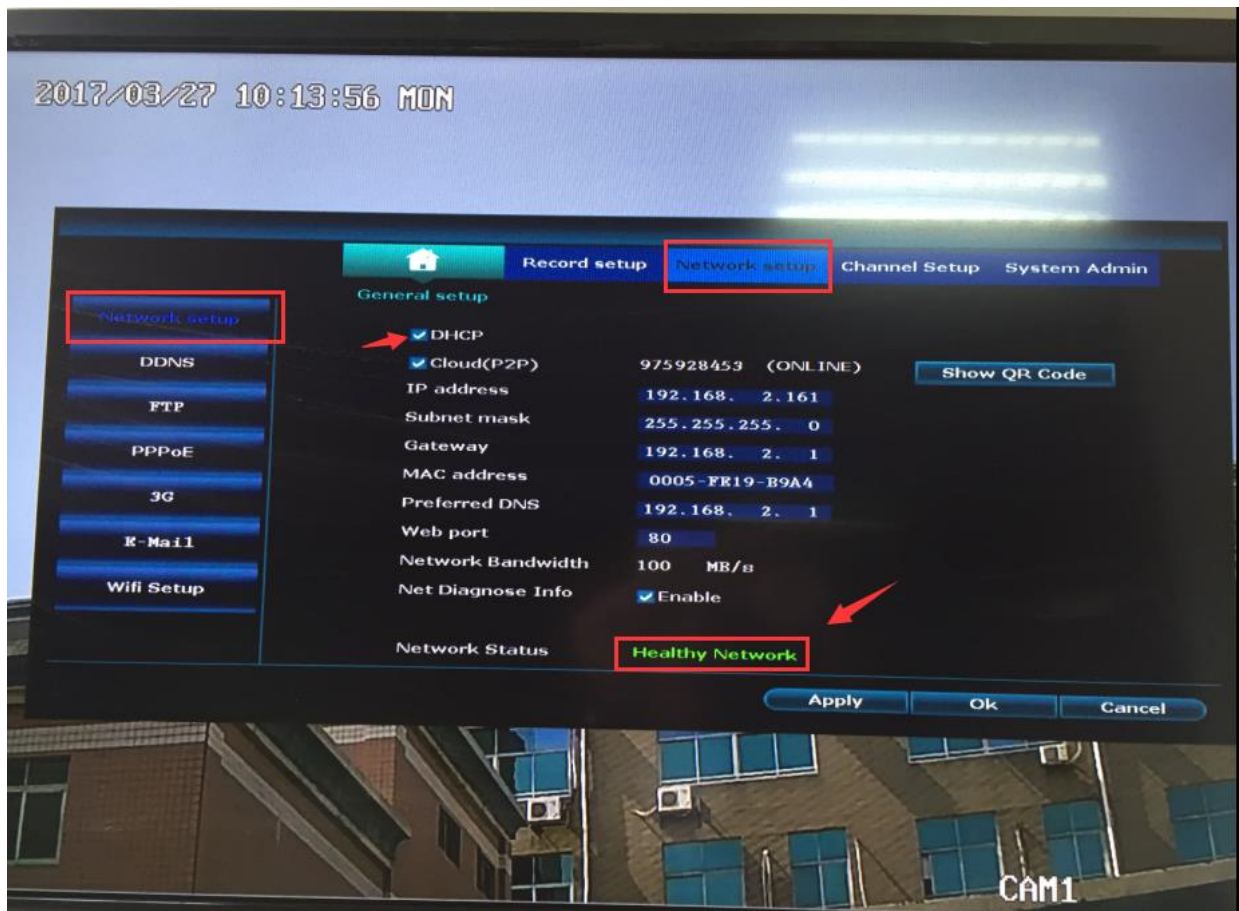

3, System Admin---System upgrade page.

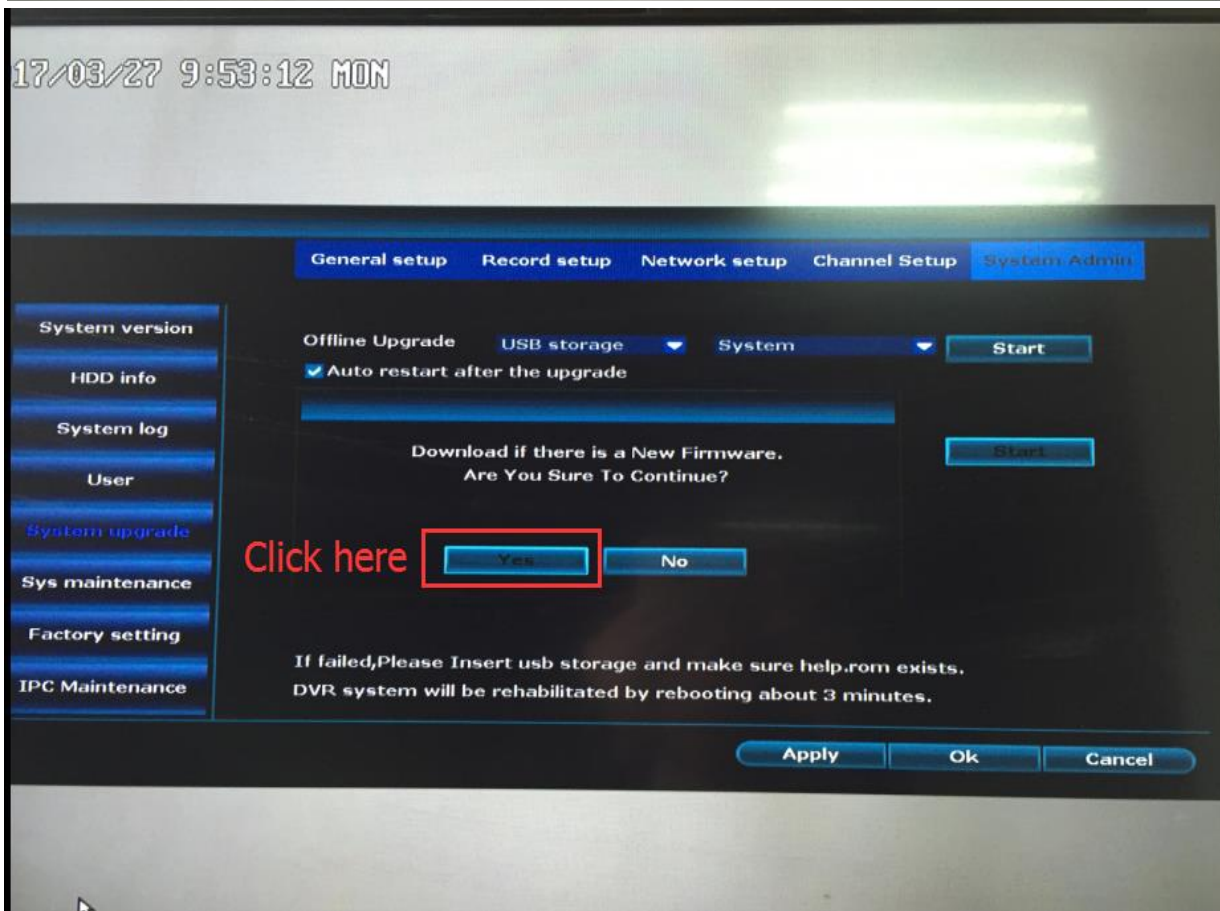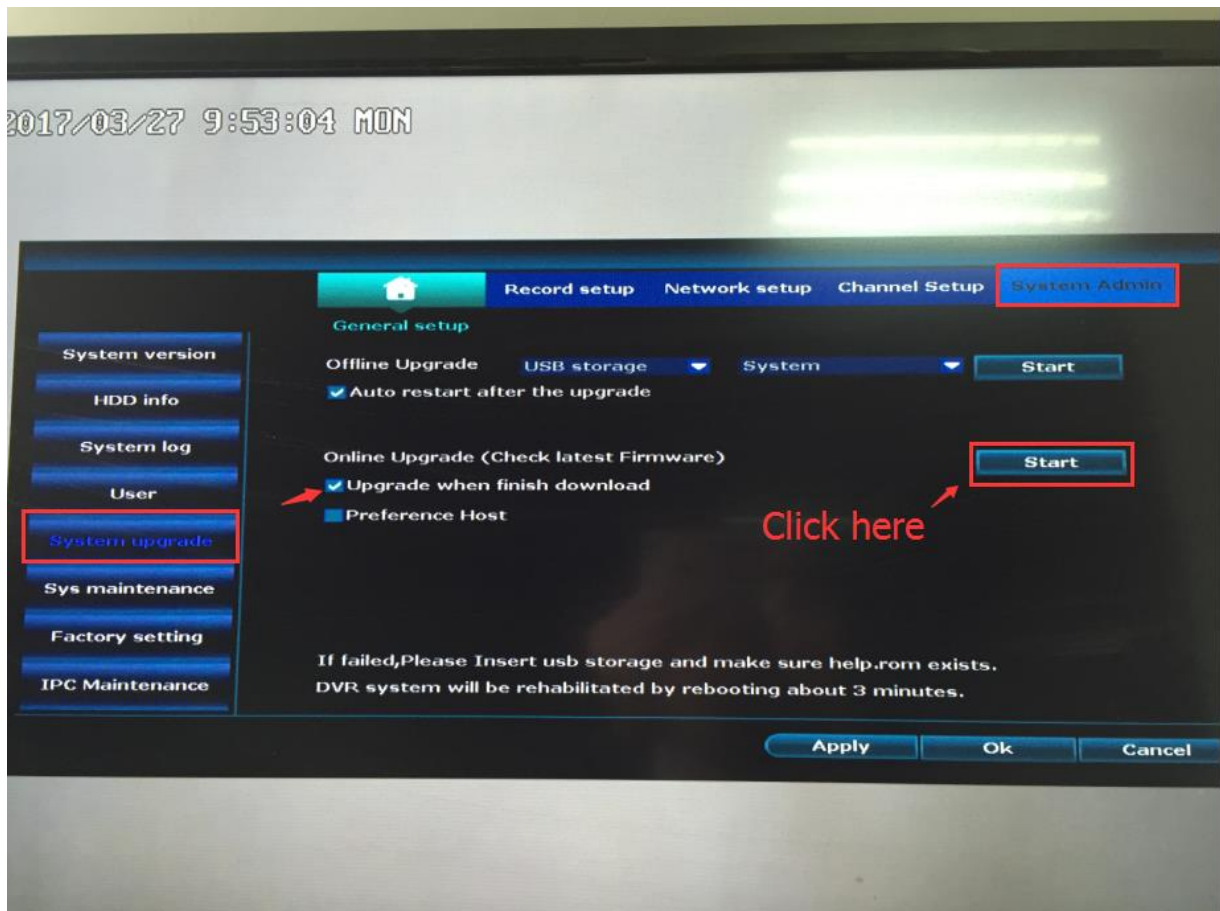

4, System Admin---IPC Maintenance page

